



BLIKSUND

How to enable Advanced settings for CRS Windows

Versie: July 2025


How to enable Advanced settings

If you want to access the Advanced settings:

- You have to be a user with Administrator rights in Windows
- Depending on your settings, you need to have elevated rights

How to get elevated rights?

- Right click on the Crash Recovery System shortcut
- Choose “Run as administrator”, and click on Yes in the following dialog

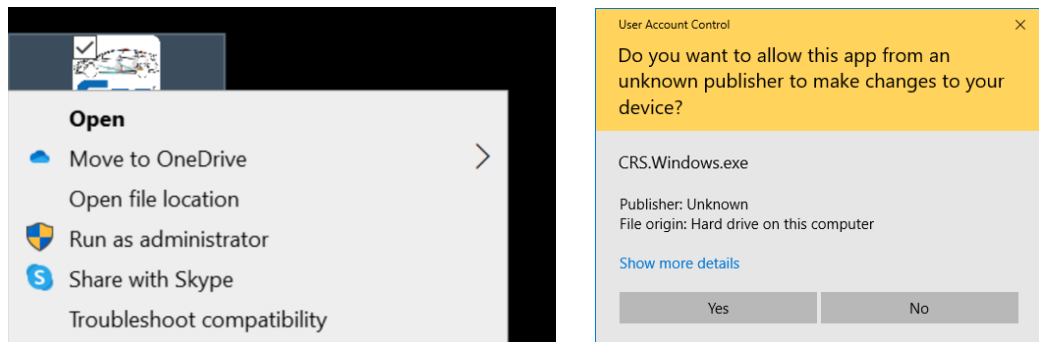

- Go to CRS Management (Button top right with horizontal lines), then Preferences. Advanced settings should be visible and expendable:

